


# N95HV HI-VIS PARTICULATE RESPIRATOR



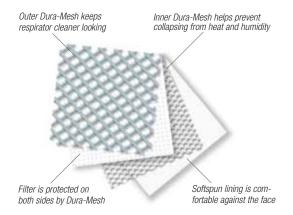

# **HI-VIS SOLUTION**

The Moldex 2200N95HV Hi-Vis Particulate Respirator makes the supervisor's job easier. The 2200N95HV makes workers stand out in a crowd, so supervisors can make quick and easy compliance checks.

# **INCREASED WORKER SAFETY**

The Hi-Vis respirator also creates a safer working environment for the workers. Whether workers are in a high traffic, low traffic, or no traffic area, the Hi-Vis mask will help them get noticed by potential hazards.

# **EASY FIT, MORE COMFORT**

The molded nose bridge with soft foam nose cushion provides the wearer an easy comfortable fit. There's no metal noseband to adjust and the seal is maintained without pressure points.

# **DURA-MESH® SHELL LASTS LONGER**

The exclusive Dura-Mesh shell protects the filter media so it stays cleaner-looking longer. The shell also resists collapsing in hot, humid environments so the respirator holds its shape longer. The result is fewer respirators used and lower costs.

## **FEATURES**

- High visibility color stands out in a crowd.
- Easy compliance checks.
- Dura-Mesh shell resists collapsing in heat and humidity.
- Molded nose bridge seals easily without a metal noseband.
- Facepiece is naturally contoured without pressure points
- Straps are securely attached so they don't break at the seal.
- Softspun® lining for increased comfort and durability.
- Soft foam nose cushion for added comfort.
- Meets heat and flame resistance in accordance with ANSI/ISEA 110-2009 Section 7.11.1.
- 100% PVC-Free for a greener alternative.





# **N95HV** HI-VIS PARTICULATE RESPIRATOR

PART # / DESCRIPTION	SIZE	DISPLAY	CASE
2200N95HV High Visiblity Particulate Respirator	M/L	20/Box	12/Case

M/L = Medium/Large

#### **WARNING TO USER**

- 1. Follow all instructions and warnings on the use of this respirator and wear during all times of exposure. Failure to do so will reduce respirator effectiveness, wearer protection and may result in sickness or death.
- 2. Before use, the user must first be trained by the employer in proper respirator use, in accordance with applicable safety and health standards, for the contaminant and exposure level in the assigned work area.
- 3. The particulates and other contaminants which can be dangerous to your health include those which you cannot see, taste, or smell.
- 4. This product has not been sold with warnings or use instructions for personnel involved in healthcare or related situations, where there may be the possibility of contact with disease or biological hazards. If you are considering such uses, first call the Moldex Technical Service Department: +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512/550



# Moldex-Metric, Inc. CULVER CITY, CALIFORNIA, 90232 +1 (800) 421-0668



THESE RESPIRATORS ARE APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS.

TC-	PROTECTION <sup>1</sup>	RESPIRATOR			CAUTIONS AND LIMITATIONS <sup>2</sup>
		2200N95-HV	2201N95-HV	2207N95-HV	
84A-4395	N95	Х	Х	х	ABCJMNOP

N95 Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil; time use restrictions may apply

- 2. Cautions and Limitations

- 2. Cautions and Limitations
  A Not for use in atmospheres containing less than 19.5 percent oxygen.
  B. Not for use in atmospheres immediately dangerous to life or health.
  C. Do not exceed maximum use concentrations established by regulatory standards.
  J. Failure to properly use and maintain this product could result in injury or death.
  M. All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA, and other applicable regulations.
  N. Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configurations as specified by the manufacturer.
  O. Refer to user's instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
  P. MIOSH does not evaluate respirators as surgical masks.

#### USE AGAINST:

1. Particulate aerosols free of oil.

#### DO NOT USE AGAINST:

- 1. Concentrations of contaminants which are unknown, or are immediately dangerous to life or health.
- 2. Concentrations of particulates which exceed the maximum use concentration or 10 times the OSHA Permissible Exposure Limit, whichever is lower.
- 3. Gases, vapors, asbestos, paint spray, sandblasting or particulate materials which generate harmful vapors.
- 4. Oil-based mists.

### RESTRICTIONS

- 1. This respirator does not supply oxygen and must not be used in atmospheres containing less than 19.5% oxygen.
- 2. Do not remain in contaminated area if any physical distress occurs, for example breathing difficulty, dizziness or nausea.
- 3. Leave contaminated area and replace respirator if it is damaged, distorted, a proper fit can not be obtained or breathing becomes difficult.
- 4. Prior to each use, carefully inspect the entire respirator, including filter media and strap/weld attachment area for tears and damage. Staple or strap/weld attachment perforations do not affect respirator performance.
- 5. Do not alter, modify, or abuse this respirator.
- 6. Store unused respirators in box/bag in a clean, dry, non-contaminated area.
- 7. Dispose of respirator according to your employer's policy and local regulations.
- 8. Dispose no later than thirty days after first use.
- 9. Use respirator before the "use by" expiration date printed on box/bag.
- 10. If used for welding, wear appropriate eye and face protection.

# **DISTRIBUTED BY:**



#### **MOLDEX-METRIC. INC.**

10111 Jefferson Blvd. Culver City, CA 90232 TEL: +1 (800) 421-0668 or +1 (310) 837-6500 FAX: +1 (310) 837-9563

E-mail: sales@moldex.com www.moldex.com

**CANADIAN CUSTOMER SERVICE** Tel: +1 (800) 421-0668, Ext. 550/512 Fax: +1 (310) 837-9563





