

PIG Mercury Spill Kit in Bucket

Instructions

The absorbent powder contained in this PIG Mercury Spill Kit will bond with droplets of mercury, transforming them into a solid material and making handling and disposal safer.

1. Remove jewelry, eyewear and all other metal objects. Put on appropriate personal protective equipment (PPE, supplied in this spill kit) prior to entering the spill area.
2. Sprinkle PIG Mercury Absorbent Powder in a circle around the spill to prevent the mercury from spreading.
3. Gently pour more absorbent powder directly onto the spill, working from the outside inward until the mercury is completely covered. **(fig. A)**
4. The mercury will be completely absorbed, forming a solid material and eliminating dangerous vapors. If the mercury is not fully absorbed within 2 to 3 minutes, use the provided plastic scraper to thoroughly mix the powder with the mercury.
5. Remove the solid material by sweeping it up with the broom and dustpan found in this kit. **(fig. B)** Place the collected material, broom and dustpan into the provided disposal bag.
6. Use PIG Mercury Cleanup Wipers to wipe the surface and remove any residue. **(fig. C)**
7. Place all used wipers in the disposal bag and tie it closed. Place the bag in the spill kit container and close the lid.



CAUTION: Heat may be generated during absorption process.

NOTE: Appropriate personal protective equipment (PPE) should be worn when treating any hazardous spills. Store product in a cool, dry and well-ventilated area, away from moisture.

DISPOSAL NOTICE: Used absorbents can be considered hazardous and must be disposed of in compliance with local, state and federal regulations. For information on disposal options, call New Pig.

SPILL KIT CONTENTS

- (1) 1,000-grams container of PIG Mercury Absorbent Powder (PLP602)
- (1) Dispenser of 10 PIG Mercury Cleanup Wipers (WIP1404)
- (1) Pair of Goggles
- (1) Pair of Latex Gloves
- (1) Dustpan and Hand Broom
- (1) Plastic Scraper
- (1) Disposal Bag and Tie

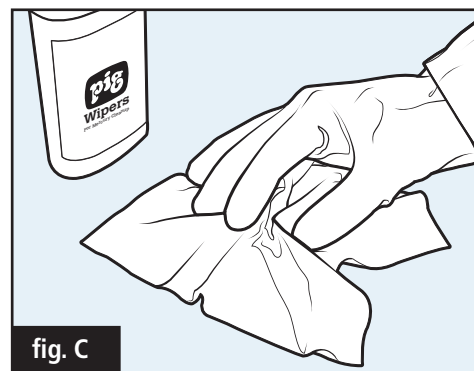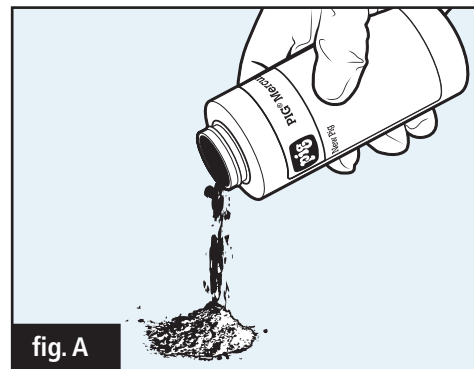

New Pig

One Pork Avenue
Tipton, PA 16684-0304

newpig.com

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See tm.newpig.com

UK: **0800 919 900**

Outside North America: **+1-814-684-0101**

502241/351514