Pulsar/Compact/Twist X-Cam Ascenders



C € 0120 EN12841 type B EN567 Manufactured by; The heightec Group Ltd, Kendal, Cumbria LA9 6NH, UK

Type approval: SGS United Kingdom Ltd, Weston-Super-Mare, BS22 0WA, UK Doc UI-D4X - Issue date 03/12/2013

heightec.com

the upper hole to shoulder straps, chest harness or chest strap; adjust so that ascender lies flat against the body.

Use

See guidelines overleaf regarding selection of anchor points.

Open the cam by pulling down on the catch, and hooking it around the body of the device as shown in the diagram. Place the rope in the inner curve of the body as shown, and release the catch so that the cam grips the rope.

Progression up the rope is achieved by alternately standing in the footloop and pulling rope through the chest ascender, then sitting back in the harness while pushing the handled or compact (footloop) ascender up the rope.

Avoid slack in the rope between the anchor point and the user.

To remove the rope, pull down on the catch while slightly lifting the device, and hook the catch around the body of the device.

USER INSTRUCTIONS

D40 - Right Handed Pulsar

D40B - Right Handed Pulsar - Black

D40L - Left Handed Pulsar

D41 - Compact

D42 - Twist

Compatibilty

Approved to EN12841 on 10-13mm heightec Tectra rope, also to EN567 on 9-13mm dynamic and low stretch rope (10-13mm for Twist).

Harnesses, lanyards and connectors should conform to the relevant EN standards.

Lanyards should be of dynamic rope to EN892 with appropriate knots loaded before use, or lanyards conforming to EN354, adjusted to the correct length (the ascender should be within reach when hanging from it).

Fall arrest lanyards must not be used with ascenders.

For work positioning, harnesses should conform to EN358 or EN813.

In work positioning a secondary means of protection may be necessary e.g. safety nets or a fall arrest system to EN363.

Suitable locking connectors conforming to the relevant EN standards should be used and correctly fastened. A screwlink connector is recommended.

These requirements must be adhered to.

Typical attachment methods for rope access use:

Pulsar and Compact


Attach the lower hole of the Pulsar or Compact to the front waist attachment point of the harness with a suitable lanyard. A footloop may be attached to the hole next to it.


Twist

Attach the lower hole of the Twist directly to the front waist attachment point of the harness with a screwlink connector. Attach

Ascender installed on rope

Opening the ascender to insert / remove rope

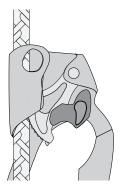

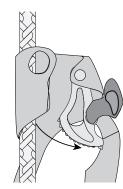

Warnings

Do not use this product outside its limitations, or for any purpose other than that recommended above. Do not alter or make additions to this product.

EN12841 Type B and Type C rope adjustment devices are for progression along the working rope. They should always be used in conjunction with a Type A rope adjustment device and a safety rope (back-up device).

Not suitable for use in a fall arrest system.

This device works by a toothed cam gripping a rope: the teeth penetrate the sheath to provide grip. The performance of this equipment may be affected by the presence of mud, ice, oil, dust or water etc.

Beware of rope running over sharp edges, particularly when under tension.

Overloading or dynamic loading may damage the anchor rope.

The anchor rope should not be inclined from the vertical nor deviate at the device by more than 45 degrees.

1 - Personal issue and traceability:

This product is personal protective equipment and should be individually issued to the person who will be using it. The product should remain traceable to the original certificate of conformity and a permanent record should be kept of its use. This user instruction forms part of the permanent product record. All users must receive and read a copy of these instructions and should understand what the instructions mean and be familiar with them, including, but not limited to function, suitability, compatibility of the product and inspection for defects arising from damage. A copy of this user instruction should be kept with the equipment, and referred to before and after each use. In the event of a rescue, these instructions should be provided to the rescuer.

2a - Anchor Points:

The anchor device or anchor point used should be of sufficient strength to sustain foreseeable loads in all permitted directions. Specific standards requirements:

EN: Anchor device should conform to EN795, with minimum static strength of 12kN. heightec reccommend a higher strength of 15kN as specified in the IRATA ICOP and BS7985. When more than one system is attached to an anchorage, these strengths should be multiplied by the number of systems. Anchorages should be positioned to minimise the potential for falls, and the distance and consequences of any potential fall, ideally above above the user. Verify there is sufficient free space beneath the user to avoid collision with the ground or other obstacles and minimise sideways or pendulum falls. The connecting system instructions should give advice on clearance required, but a fall arrest energy absorber may extend by up to 1.75m.

2b - Further Requirements for Anchor Points in US (ANSI): ANSI: (a) where certified, twice the maximum arrest force, or (b) where not certified 22.2kN (5,000lbf) for fall arrest, 13.3kN (3,000lbf) for work positioning, or 4.5kN (1,000lbf) for restraint. When designing, selecting, and certifying a fall arrest anchorage, the qualified person shall include the limitations on use of the system in fall protection procedures described in ANSI Z359.2. Design, selection and installation of certified fall arrest anchorages shall include determining a safe location where and how to connect those anchorages by taking into consideration the forces generated by arresting a fall, total existing and anticipated loading, load path, structural member strengths connection and support strengths, stability, clearance requirements, swing fall, rescue deflection of the system, and impact on the structural members to which the fall arrest system

Anchorages selected for rescue systems shall have a strength capable of sustaining static loads, applied in the directions permitted by the rescue system of at least 3,100lbf for connection of rescue system only, or meet a Factor of Safety of 5:1 based on the static load placed on the system when the system is designed, installed and used under the supervision of a qualified person.

INSPECTION DECORDS

Persons engaged in rescue operations that are exposed to a fall hazard, must be provided an anchorage suitable for fall arrest in accordance with ANSI Z359.1.

Anchorage connectors shall not be attached to anchorages where such attachment would reduce the anchorage system strength below the applicable level set forth above or reduce the anchorage strength below the allowable level set by applicable structural codes. A suitable anchorage connector shall be used for rigging the connection of lanyards and lifelines to structural members. A lanyard shall not be connected back onto itself for use as an anchorage connector unless specifically designed for this purpose.

Anchorage connections shall be stabilised to prevent unwanted movement or disengagement of the rescue system from the anchorage. Verify system connections by pre-tensioning the system before applying the intended load.

Other components used in fall protection or work positioning systems

must conform to the relevant standards, be compatible with each other and be used in accordance with their user instructions.

3a - Inspection and care:

The strength of this product may be affected by cuts, nicks, deep scratches, wear, abrasion, deformation, chemical contamination, UV degradation, exposure to flame, extreme termperatures and other factors. Keep this equipment away from such sources of damage. Use this product with caution near moving machinery, electrical hazards, sharp edges and abrasive surfaces.

This product must be inspected before and after use, and particularly after being used for rescue, to ensure the product is in a suitable condition and operates correctly. Written records should be kept of all inspections.

If there is any doubt about condition of the product, or it has been subjected to a fall or substantial shock load, withdraw it from use until confirmed to be safe, in writing, by a person deemed to be competent by The heightec Group.

No repairs of this product should be undertaken, any attempt to do so

may invalidate it's compliance and/ or certification.
The safety of users depends upon the continued efficiency and durability of this equipment, which must subjected to detailed visual and tactile examination by a competent person* at intervals of no greater than 6 months for textiles or 12 months for metals, taking into account relevant legislation, equipment type, frequency of use and environmental conditions. These examinations should be carried out strictly in accordance with the manufacturer's periodic examination procedures. Detailed examinations should include confirmation of the legibility of product markings.

*A competent person may be defined as someone who "...has appropriate theoretical and practical knowledge and experience..."

2

The results of examinations should be recorded. Intermittent inspections of components which may be subject to excessive wear may also be appropriate. The results of these need not be recorded. Contact your distributor for information on suitable inspection procedures

3b - Inspection criteria:

Textile products or elements: check material and stitching for damage including cuts, nicks, abrasion, fraying, discolouration, heat or chemical damage etc. Ensure stoppers are present on ends of adjustment webbing.

Metal devices or components: check for damage, corrosion,

excessive tightness, sharp edges, excessive play, deformation, cracking or anything that might affect strength. Check security and correct operation of any moving parts e.g. side plates, return action of springs, cams, operating handles, bearings. Check function of closure mechanisms, where present (e.g. screwlink thread, connector gates).
3c - Cleaning, maintenance and storage:

Wash textiles by hand with non-detergent soap at approx 25°C (cool). Rinse and dry naturally, away from direct sources of heat and sunlight. If necessary use a disinfectant compatible with polyamide and polyester. Use diluted and rinse thoroughly in clean water. Dry as previously stated. These cleaning

procedures must be strictly adhered to.
Mechanical metal products with moving parts should be occasionally oiled, at bearings or pivot points, with excess oil removed. Store and transport in a dry, clean condition, away from sources of severe vibration, humidity, direct heat, sunlight and any physical or chemical contaminants

4 - Lifespan:

Textile products or elements: maximum 10 year lifespan from date of manufacture, subject to competent use, maintenance and examination programme.

Metal products: indefinite lifespan, subject to competent

use, care and examination programme. The lifespan of all products will be reduced by normal wear and tear, particularly when used in abrasive or corrosive environments. In extreme circumstances, the life of an item may be reduced to a single use.

5a - General usage:
Users should be suitably trained and competent to work in situations where a risk of falling may be present or under the direct supervision of such a person, fully trained in the use of this product and free of medical contra-indications for work at height or rescue. Do not use this product outside of its limitations or if you are unsure of any aspect of its use. No alterations or additions may be made to the product. The heightec Group do not take any responsibility for injury or accident of any kind arising from the use of this product

It is essential a rescue plan is in place to deal with emergencies and in particular to consider treatment and recovery of a fallen or suspended person. Rescue equipment must be present and personnel should be competent in its use. Orthostatic intollerance can occur when a person is suspended motionless in a harness, and is potentially fatal. Ensure that the rescue of a

suspended person is carried-out promptly. Contamination with oils, lubricants, water or solvents may alter the performance of the product. For rope devices behaviour will vary according to the age, type, diameter and characteristics of the rope used.

5b - Care of rope during use:

Take any steps necessary to protect the rope from damage during use, including rope protectors, edge protectors, intermediate anchor points or deviations to avoid sharp or rough edges. Consider also the position of the rope below the user. Ensure rope cannot suffer from the effects of wind, or become trapped around obstacles

6 - Guarantee:

This product is guaranteed for three years against faults arising from manufacturing errors or materials defects. This guarantee does not include normal wear and tear, faults arising from uses for which the product was not designed and accidental damage.

7 - Notes:

If this product is re-sold outside the original country of destination the reseller shall provide these instructions in the language of the country in which the product is to be used.

Markings:

The following markings may be present on the product:

Read these instructions before use.

CE mark - European Conformity



For use with kernmantel ropes conforming to EN1891



XX-YY - Diameter range of rope which this product may be used, in mm



Date of manufacture is marked on the product in the form: DAY MONTH YEAR, DDMMYY eg.120510.

The ID no is unique to this item

Do not remove or obscure the product labels or markings.

ID Number

		ID Number:		INSPECTION RECORDS		I		
				PO/ Certificate No.:				Product:
				Purchase Date:			e:	Model/Typ
				First Use Date:			ire Date:	Manufactu
Due	Next	Inspector		Actions		ions / Comments	Observati	Date
	1							
	1							
					\dashv			
	1							

4